



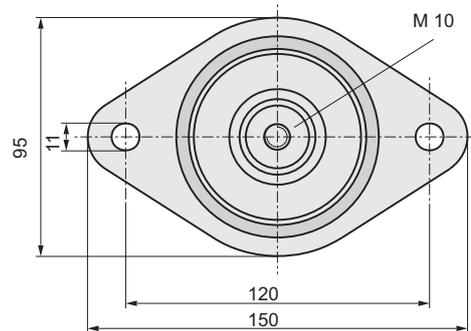

Federschwingungsdämpfer

Spring isolators


| Type | | Nennbereich |
|-------|------|-------------|
| type | | range |
| type | | [N] |
| - | SN 5 | 115 - 285 |
| FSD 2 | SN 6 | 175 - 435 |
| FSD 3 | SN 7 | 285 - 650 |
| FSD 4 | SD 4 | 475 - 1200 |
| FSD 5 | SD 5 | 720 - 1700 |
| FSD 6 | SD 6 | 1130 - 2700 |
| FSD 7 | SD 7 | 1815 - 3800 |

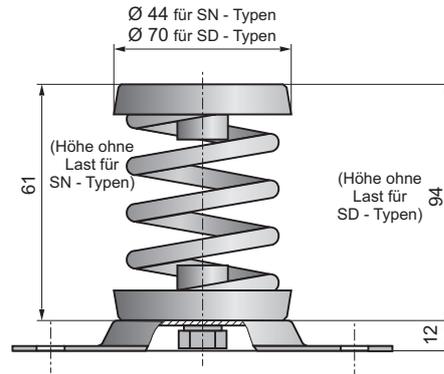

Gummischwingungsdämpfer

Rubber isolators

| Type | d1 | d2 | D | h | l1 | t |
|----------|------|------|------|------|------|------|
| type | [mm] | [mm] | [mm] | [mm] | [mm] | [mm] |
| G 15 | M 6 | M 6 | 25 | 15 | 18,5 | 6 |
| G 30/1+2 | M 8 | M 8 | 40 | 30 | 24,5 | 7 |
| G 30/3-5 | M 10 | M 10 | 50 | 30 | 34 | 8,8 |
| G 40/1+2 | M 16 | M 16 | 100 | 40 | 43 | 17,5 |
| G 55/1+2 | M 12 | M 12 | 75 | 55 | 37 | 11,5 |

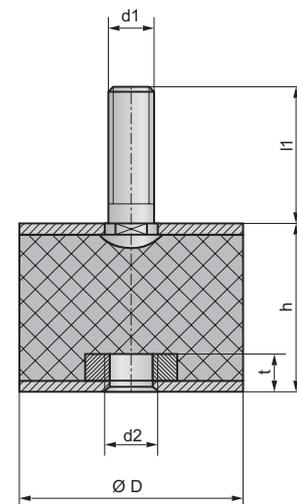

Schwingungsdämpfer nur auf Druck und nicht auf Zug belasten!

Use vibration dampers only with compression and never use with traction charge!